

## COMMISSIONING

### Charge Device



#### Step 1

- Place the charging disc on a flat, non-slip surface and connect to the mains via the supplied USB cable and power supply
- Place Device on the charging disc for approx. 30 min and make sure that the Device is placed correctly  
You must hear a Confirmation Tone

In case of heavy discharge This tone can be delayed.

**Note:** Device can only be switched on with Charging Disc

### Info for Charging Disk

#### Positioning aids

Self-adhesive rubber bumpons are included in the scope of delivery. They should be used as positioning aids for Device on the loading disc. We have tested following placement:



Leave Device on the charging disc when it is not needed, when you go away or at night. Do not turn off Device !

**Note:** If Device is placed correctly, you will hear a confirmation tone

**Note:** Smoke alarm detection is activated only on Charging Disk.

## COMMISSIONING


### Register Device at DECT Base Station

- Bring Device to your base station
- Activate the registration mode of the base station

e.g. Telekom Speedport



e.g. 1&1 Fritzbox

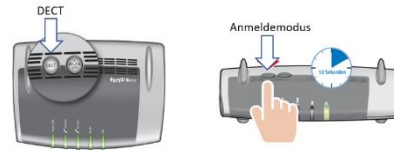

Note: Registration mode remains active for 5 minutes

- Press Device call button  
*"Registration activated"*



**Note:** Device logs on with PIN "0000".  
If the PIN code is different, you must subscribe Device via the PC APP.

### Info to Registration to DECT Base

#### Registration fails (Registration = Subscription)

**Note:** Pay attention to *announcements* from Device

»*wrong PIN*« The base station does not use 0000  
**help:** => Login with the help of the PC APP

»*not in Registration mode*« The base station is not in  
Registration mode

**help:** => activate Registration Mode (again)

»*no base found*« The base station is switched off  
or out of range

**help:** => switch on Base, place Device nearby

»*check base*« Main reason is that  
too many DECT phones are registered

**help:** => De-registrate at least 1 DECT phone

#### Step 2

## COMMISSIONING

### Check your phone connection

- Call your telephone system  
e.g. with mobile phone
- When the Device rings, press call button  
central key

The Device is **operational**.

**Note:** If you haven't entered phone numbers yet, you can add a caller's phone number to the phone book. In this case press call button when prompted. This telephone number also serves as emergency number for help, fall and smoke alarm.



## COMMISSIONING

### Enter phone numbers and names

Download the program PC APP to your Windows PC via the following link:

[www.pcapp.net](http://www.pcapp.net)


Start the installation via the **SETUP** program.

After installation, you will see the **DECT Telecare** ICON on your desktop.

Open the **PC APP** and connect the Device to the PC with the USB cable of the charging station. Plug the USB cable OFF/ON if the Device is not immediately recognized.

Enter all phone contacts and **APPLY** your entries page for page. This will transfer data/audio to the Device.

Please be patient and read the manual (downloaded)

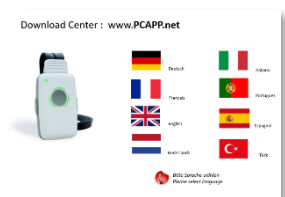

## Make phone call via side both keys the fast selection



## Method 1 Quick dial for experienced



- 1 press side key to open "Phone Book"  
⇒ press side key for min 0,5 seconds
- 2 press side key to select Register
- 3 press **opposite** side key press to select Name
- 4 press call button "*Hubert is called*"

## Make phone call via one side key the regular way



## Method 2 Standard Dial for everybody

- 1 press side key to open "Phone Book"  
⇒ press side key for min 0,5 seconds
- 2 press side key to select Register  
**Wait** for announcement: »*Select Name*«
- 3 press side key press to select Name
- 4 press call button "*Hubert is called* «

# Get Started DECT Telecare Emergency Call Blind Phone Fall Detection



**DECT Telecare** (Device) is a DECT cordless telephone with security functions for your telephone system. The Device is suitable for the blind.

1. Register the Device to your DECT telephone system. The Device can then already answer calls. Charge the Device for 30 minutes beforehand.
2. Download and Install PC APP -Configuration Program via [www.pcapp.net](http://www.pcapp.net). You automatically load the **Manual** and select the native **Language** for the Device.
3. Open the PC APP (for WIN PC) and connect the Device to the PC via the USB cable of the charging disc. Enter your phone numbers and names.

## Emergency Call

Press the call button **for 2 seconds**  
»*Call for help is triggered*«

The Device contacts your personal help numbers.

If the Device has detected a **Fall**, the Emergency Call is automatically executed.



## RETURN DELIVERY Note

### Deliver to

Dealer/Company .....

Street. Nr .....

ZIP Code City .....

### Sender

Name .....

Street. Nr .....

Postcode City .....

Order No .....

## Make a phone call in case of severe disability



- 1 press side key to open "Phone Book"  
⇒ press side key for min 0,5 seconds
  - 2 press call button to start reading names aloud
  - 3 press call button "*Hubert is called*"
- Names will be read aloud
- Waiting time between names is adjustable: 1 or 2 seconds (see Manual)

The operation can be aborted by pressing the Central Key for min 2 seconds